



RCX / RCXb = Room climate controller
 LCX / LCXb = Lab Climate Regulator
 CBD = Junction box TTC, VTD
 CBD = Junction box ISQ, ISQ-F, ISQ-S
 DCV-RC / DCV-RCb = Room climate control
 DCV-LC / DCV-LCb = Lab climate control

Signal:
 GQ: 2-10V (400-2000 ppm)
 GT: 0-10V (12-43°C)

* GT is not engaged
 ** Note: Distinguish between phase (G + / 24VAC) and G0 / 0: Common zero for 24 VAC and signals (GQ, GT).

